



60.00 mm

Dust Shield Installation


1. Unscrew the valve cap.

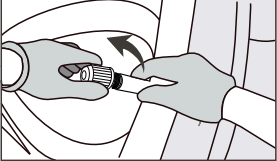

2. Mount dust shield onto valve and turn inside out, Fit hex nut onto valve.

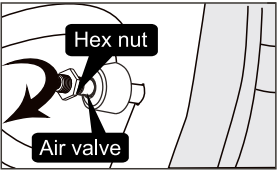


3. Screw the sensor onto the valve.

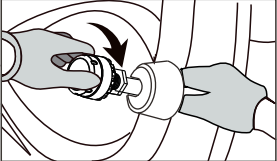


105.00 mm

4. Tighten the nut with spanner provided.

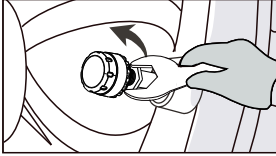

5. Check air leakage by spraying soapy water.

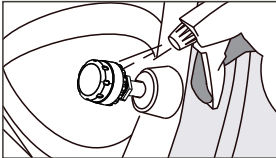

6. Place the dust shield on the hex nut and sensor.

